

Clean Ream Extreme™

#04564

Toilet Closet Flange Reamer


Escariador de brida

Alésoir pour bride de toilette

**Reams to remove 4" Schedule 40 PVC
Closet Flange**

TRF400

- **Carbide Blade**

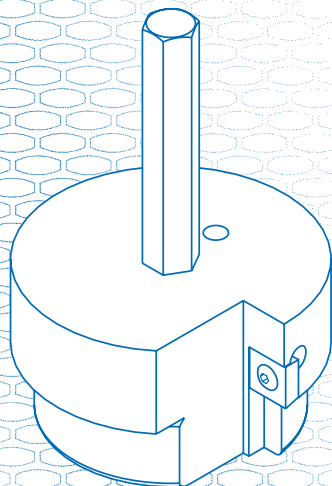

PIPE TOOLS & VISES
SINCE 1896

Clean Ream Extreme™

TRF400

Toilet Closet Flange Reamer

Escariador de brida

Alésoir pour bride de toilette

**For removing a closet flange from inside 4"
Schedule 40 PVC pipe**

ASSEMBLY


1. Insert shaft into reamer.
2. Make sure shaft is all the way through and flush with the bottom of the reamer.
3. Tighten set screw on side using hex wrench.

INSTRUCTIONS

1. Insert reamer into toilet closet flange, insure tool stays on center to prevent binding. If no chips are being made, remove tool and check.
2. Ream until old flange is removed.
3. Remove reamer and clean out chips from pipe.

Note: Some toilet closet flanges may require to ream first with the Reed PPR300 3" reamer to remove the tab or lip to create the correct pilot hole diameter for the TFR400.

Change cutting edge by removing cap screw and rotating or replacing carbide blade. Replace blade, then cap screw, and tighten.

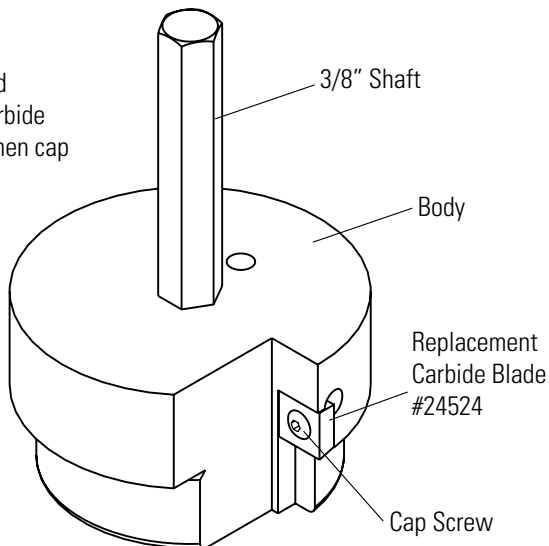

PIPE TOOLS & VISES
SINCE 1896

www.reedmfgco.com

Reed Manufacturing Company, Erie, PA USA

Made in USA
Hecho en EE.UU.
Fabriqué aux É.U.



0917 - 54564